

ACCESSORY KIT INSTALLATION MANUAL

REPLACEMENT SCREW KIT - S1-47327260000

GENERAL

Replace the existing Delta Black screws with the new Sharperize screws as shown below.

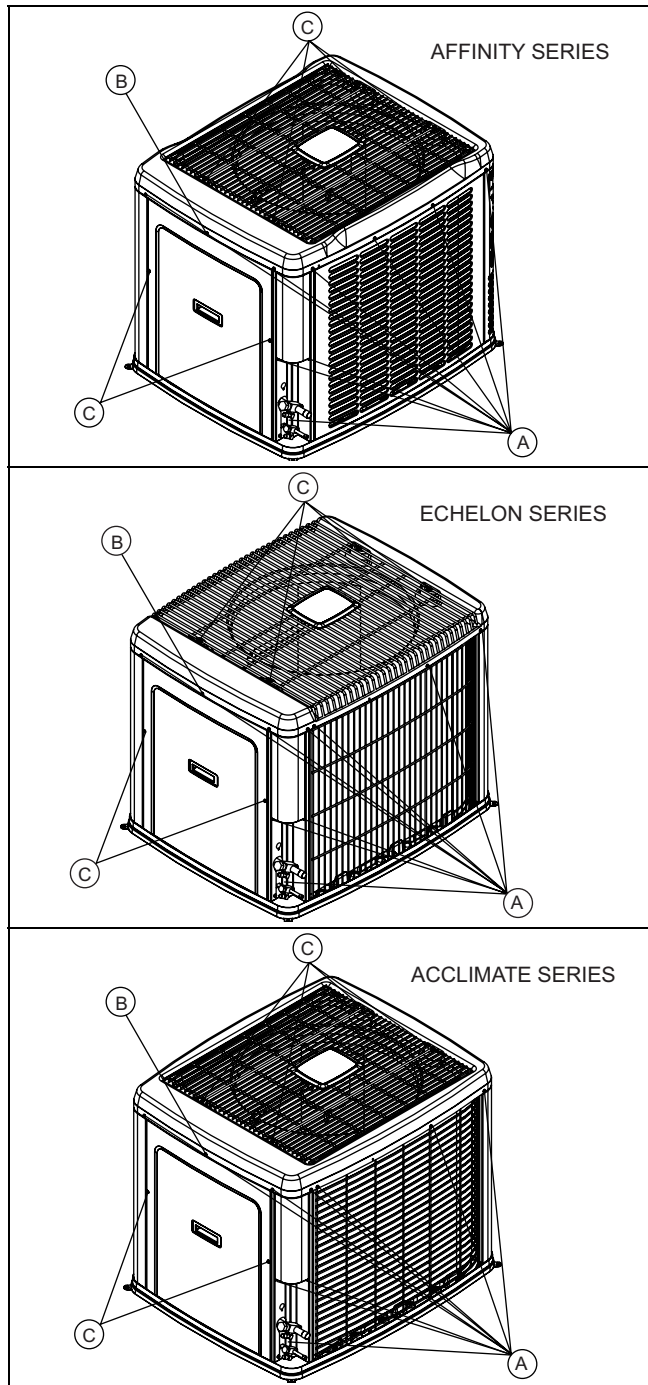


FIGURE 1: Screw Locations

CONTENTS OF KIT

1. Quantity 35, Type AB, #10 - 16 x 3/8", black Sharperize coated screws. (P/N: 021-18396-000)
2. Quantity 10, Type AB, #10 - 16 x 3/4", black Sharperize coated screws. (P/N: 021-18397-000)
3. Quantity 5, Type B, #10 - 16 x 3/8", blunt end Sharperize coated screws. (P/N: 021-18399-000).
4. Quantity 1, form 035-20274-000, instruction showing screw use location.

INSTALLATION

Refer to Figure 1 and install as follows:

A. 3/8" - 16. TYPE AB (POINTED):

P/N: 021-18396-000

- Top panel (except the fan guard and the center of the access panel).
- Bottom of corner electrical panel.
- Conduit access panel (inside the corner electrical panel).
- Conduit adapter plate (inside the corner electrical panel).
- Base valve panel.
- Common suction port (for heat pumps only).
- Sides of control box (the lower screws).

B. 3/8" - 16. TYPE B (BLUNT):

P/N: 021-18399-000

- Top panel at center of access panel.

C. 3/4" - 16. TYPE AB (POINTED):

P/N: 021-18396-000

- Sides of the access panel.
- Fan guard.
- Ambient Sensor (inside the corner electrical panel).
- Sides of control box (the upper screws).